




11 Disassembly and Reassembly

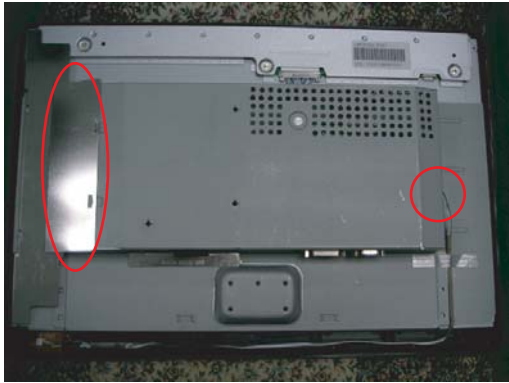
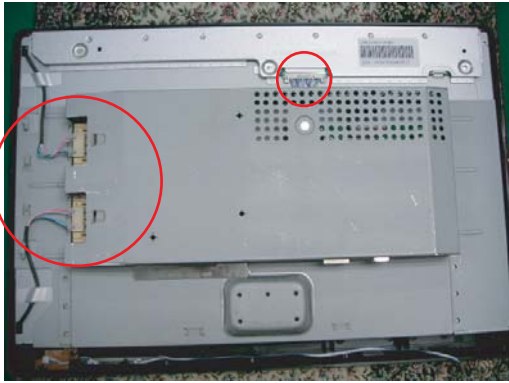


This section of the service manual describes the disassembly and reassembly procedures for the LHA20WS TFT-LCD monitors.


⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

11-1 Disassembly

- ⚠ Cautions:**
- 1. Disassembly stand on the flat desk.
 - 2. Disconnect the monitor from the power source before disassembly.

Description	Picture Description
1. Remove 3 screws from the stand and Remove stand.	
2. Remove 3 screws from the stand and Lift up back cover.	<div></div>

Description	Picture Description
<p>4. Use the jig to remove the shield lamp. (Be careful Shield.)</p> <p>5. Remove the FUNCTION Wire from PCB ASS' Y.</p>	 A photograph of the back of a white electronic device chassis. A silver, oval-shaped shield lamp is circled in red on the left side. Another red circle is on the right side, near the top edge.
<p>6. Remove the Panel Lamp wire.</p> <p>7. Remove the LVDS Wire from Panel.</p>	 A photograph of the back of the device chassis. Two red circles highlight the panel lamp wire on the left and the LVDS wire on the right.
<p>8. Remove 4 screws.</p>	 A close-up photograph of the back of the device chassis. Four screws are circled in red, indicating they are to be removed.
<p>9. Remove 4 screws and Lift up the Main PCB and IB Board.</p>	 A photograph of the back of the device chassis. The main PCB and IB board are circled in red, indicating they are to be removed.

Description	Picture Description
10. Main PCB and IB Board	

11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.